



Software Baby T

Enter to Programming

 
Press the **XL** key and immediately and without releasing this one press also the **L** key to turn off the coffee group.




Press the **XL** key for 10 seconds to enter in the menú.




Then the display on the left group will show the differents programming options.




With the **S** and **L** keys we increase/decrease the value of it, and with the **XL** key we confirm the modification, returning to the programming menú.

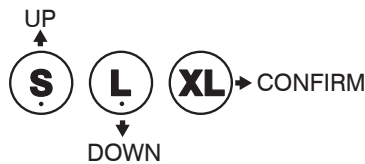

 To exit the programming menú, we must search for the "ESC" option and select it using the **XL** key.



The keypads and displays will be off. To activate again press the **L** key.

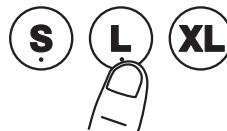



Parameters

Tc – COFFEE GROUP TEMPERATURE

To change the temperature of the coffee group.

Example of sequences:

Next parameter: **L**

or

Modify parameter: **XL** to enter **S** **L** to adjust **XL** to confirm

Ts – BOILER TEMPERATURE

To change the temperature of the steam boiler.

Tec – PID PARAMETERS

P/I/D/B are parameters to configurate the PID control. We advise not to change.

TEE – STEAM BOILER TEMPERATURE IN STAND-BY MODE

Energy saving temperature of the boiler. It's the temperature at which the boiler will be maintained when it has reached the idle time set in the following TiE parameter.

TiE - Time for the boiler to go into "saving" mode and remain at the temperature set in the previous parameter.

Ud – UNITS OF MEASURE

Degrees Celsius (C) or Farenheit (F).



P1/P2/P3/P4 – COFFEE PREINFUSION

We can program the “on” time of the preinfusion. The pump “off” time is always three seconds. Maximum seconds are 5 seconds.

Example:

P1: Preinfusion **S** key 1 press (short coffee single)

P2: Preinfusion **S** key 2 keystrokes (short coffee double)

P3: Preinfusion **L** key 1 press (long coffee single)

P4: Preinfusion **L** key 2 keystrokes (long coffee double)

Cr – CHRONOMETER FUNCTION

We can activate or deactivate the display of coffee delivery time.

U – OFFSET TEMPERATURE

This parameter is used to correct the temperature difference between the display group data and the actual temperature value at the output group.

AC - To activate and deactivate the steam boiler

EP- It allows configuring the hydraulic connection as NETWORK or TANK.

SP – Indicates the number of total services of the machine since the last reset to 0.

ST – Indicates the number of total services of the machine.

ESC – To exit of the menú.

To activate the machine press **L** key




ascaso
BARCELONA





Washing process

With the machine turned off, press the **XL** key and immediately and without releasing this one press also the **S** key. It makes 10 wash cycles

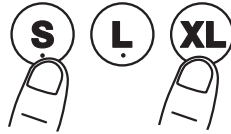

Factory reset

With the machine turned off, press **S**, **L**, **XL** buttons and **On** master switch simultaneously.



When the display shows **PRT**, Turn **Off** and **On** master switch.



To activate the machine press **L** key



“Showroom” mode

With the machine turned off, press **S** and **L** simultaneously.

