

7 ANOMALIES - CAUSES - REMEDIES

The table shows the possible anomalies that can cause non- and/or incorrect operation of your appliance. For each anomaly, the possible cause that generated it and the actions to be taken to restore its correct operation are indicated.

Anomaly	Cause	Solution
The appliance does not switch on.	No electric power.	<ul style="list-style-type: none"> • Make sure that the switch is in the "I" (ON) position; • Make sure that the circuit breaker upstream of the socket (if present) is in the ON position. • Make sure that the power cable is undamaged and correctly connected to the electrical socket envisaged in the place of use.
Coffee beans do not descend from the supply hopper.	Shutter closed.	<ul style="list-style-type: none"> • Open the shutter.
The motor stops during grinding.	Motor protection thermal cut-out intervention due to blocking of the grinding system in the presence of objects or foreign bodies between the grinders.	<ul style="list-style-type: none"> • Turn off the appliance and wait for it to cool completely. • Disconnect the appliance from the power supply. • Close the shutter and remove the supply hopper. • Clean the grinding chamber and remove any foreign bodies. • Reassemble the appliance and start a grinding cycle.



ATTENTION! If the anomaly persists even after carrying out the suggested corrective actions, or if functional anomalies occur that are not listed in the table, contact your local dealer who will decide whether to request the assistance service of Fiorenzato M.C. S.r.l. or to entrust the repair or overhaul of the appliance to a specialist technician.