




# HOW TO SET THE TEMPERATURE ON THE MIX UNDERCOUNTER BOILER


## STEP 1

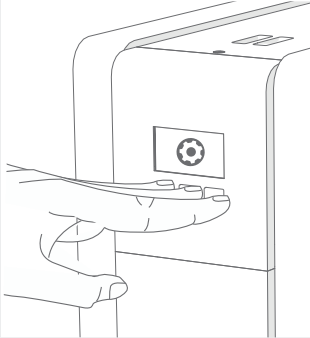

Press and hold all three buttons on the undercounter MIX boiler for no more than 2 seconds.

**Note:** Holding for longer will open the technical menu.


## STEP 2

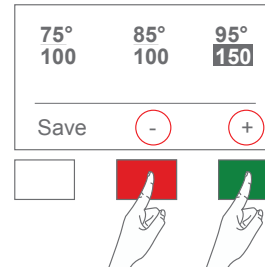

Use the **middle and right buttons** to set the temperature and volume for each button on front.


- > Use middle button to bring temperature/volume **DOWN**.
- > Use right button to bring temperature/volume **UP**.

## STEP 3

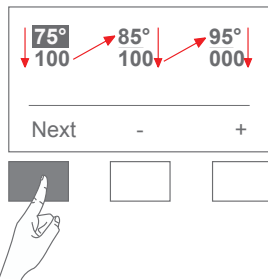


Select "**Next**" to lock in temperature and/or volume and proceed to the next button.

## STEP 4

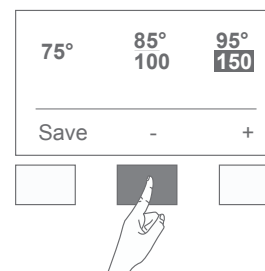


For push and hold, or to remove pre-set volumes, press the "-" button until no volume appears underneath the temperature.

## STEP 5

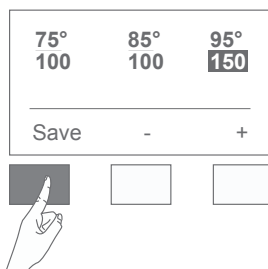


When you have set the temperature/volume for all three buttons, select "**Save**" by pressing the left button.

## STEP 6

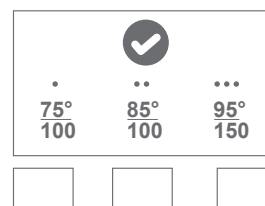

You will see the temperature and volumes you have set for each button with a corresponding dot above each on the screen.

## STEP 7

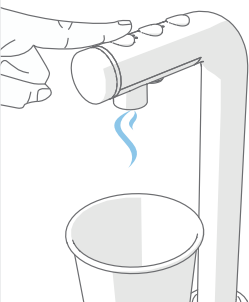

Simply press the buttons on the front to dispense hot water.

**Note:** the dots on the front buttons will correspond to the dots indicating temperature and volume set on the undercounter boiler.