

Safety and Use Guide

Raven is meant for home use. Please read this guide completely before using. Improper handling may result in an accident. Please keep this guide for future reference.

Raven is compatible with the following cooking ranges:



Electric



Gas



Induction

Please do not use with the following:



Microwave



Oven



Dishwasher

Important Safety Notes

- Check your kettle to ensure that all parts are accounted for and installed correctly. Do not use if parts are missing.
- Do not use kettle if you see any sign of cracking, chipping, denting, or any other abnormality.
- This kettle is only intended for boiling water and steeping tea. Do not use with other liquids.
- Keep kettle away from children while boiling water and soon after boiling water.

Water Levels:

- The max fill line (1.0 L / 33.8 oz) is marked on the inside surface, just below the handle. Do not fill above this line.
- Only boil between 1/3 - 1.0 L (11.3 - 33.8 oz) of water. Under boiling and over boiling the kettle may lead to discoloration, damage, melting of parts, or burn injury.
- Do not heat water with tea filter inside kettle as it may cause over boiling.
- Do not steep tea in less than 0.5 L (17 oz) of water for best extraction.
- Do not over boil your kettle. Since the pour spout and lid ventilation holes are small, there is a risk of water boiling out from these openings.
- Never heat kettle while empty. Dry boiling may deform or damage the kettle, or cause damage to your cooking range and increase the risk of fire.

Steeping Tea:

- Remove tea filter from kettle before pouring.
- Remove tea filter by grabbing the handle. If tea handle is hot, use pot holder. Do not grab any other part of the filter when removing, or shortly after removing, from hot water.
- Use caution when removing the tea filter from the kettle. The inside of the filter may be hot, and may cause burn injury.

General Usage:

- Hold lid while pouring.
- Ensure thermometer is fully seated in the lid.
- Do not align lid ventilation holes with spout. Hot water may come out of these holes while pouring. If this happens, carefully remove and re-orient the lid.
- Do not use if large gaps exist between the lid and kettle. Hot water may come out of these gaps. Ensure that the lid is secure and fits snugly onto kettle.
- Do not put hand over lid area, or remove lid, while kettle is still heating, or when water is boiling. Hot steam may be released and cause burn injury.
- Do not grab kettle body after heating. This could result in burn injury.
- The handle may become hot while boiling water or soon after boiling water. Please use a pot-holder to avoid burn injury.
- If the handle cap is loose, screw the cap back into the handle. Do not use kettle if cap remains loose and handle weight is exposed.
- Do not shake kettle up and down, side to side, or twist the handle. This may loosen the handle.
- The spout contains a functional sharp edge and care should be taken during use.

Use Instructions

Preparation Before Use:

- Apply dish-washing detergent to a soft sponge. Wash and rinse kettle thoroughly.

Cleaning and Maintenance:

- Hand wash kettle after each use, using only dish washing detergent. Do not use chlorine, bleach, or other chemicals to clean the kettle. Let air or towel dry thoroughly.
- Using a coarse sponge, brush, or other rough surface will scratch the finish.
- Do not submerge any part of the kettle in water. The body, handle or thermometer may become damaged.
- Do not leave tea in kettle for extended period of time. This may discolor the inside and leave undesirable residue.
- White spots may appear as you keep using the product. This is caused by magnesium and calcium residue contained in tap water. This is not harmful to your health. Wash and dry kettle thoroughly after each use to avoid.
- Allowing traces of salt or oil to remain in contact from other products made of steel or aluminum may cause corrosion to develop.
- If any sign of corrosion is discovered, apply some compounding polish on a soft sponge and rub. Rinse thoroughly afterwards.

Using Raven On Various Cooking Ranges:

- Wipe away any water on the bottom of the kettle before heating.
- Take care to place the kettle at the center of the heater.
- Always point the spout away from you when heating and boiling.
- **Electric Ranges + Induction Cookers:** Do not use a burner that is larger than the bottom diameter of the kettle. Excessive heating may melt or damage the handle and lid.
- **Gas Ranges:** Do not spread the flame beyond the bottom of the kettle body. The handle and lid may over heat and melt if the flame is too large.






Please be aware that placing product on rough or unclean surfaces, as well as normal daily use on cooking ranges, will damage finish on bottom of kettle. This is normal wear and does not affect functionality.



① Temperature Is Key

Place Raven on stove top and fill to the max fill line (1.0 L). Heat until thermometer reaches optimal temperature for your specific tea (see steep chart).



	white/green	170 - 185 °F	2 - 3 mins
	oolong	185 - 200 °F	2 - 3 mins
	black/herbal	200 - 212 °F	3 - 5 mins




② Choose Your Tea

Take Raven off stovetop, carefully remove lid, add Raven's tea filter and scoop tea in. Make sure to pay attention to your tea's recommended dosage.



③ Let It Steep

Steep tea until the optimal amount of time has passed. (See steep chart).

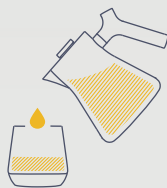

④ The Perfect Cup

Remove tea filter when your desired strength is reached to avoid over extraction. Serve and enjoy!

Hey there.

You're invited to a party... a tea party.

With yours truly of course. We'll heat, we'll steep...we'll laugh, we'll cry. Some say the Boston Tea Party of 1773 was just a warm up for the tea parties you and I are going to throw. And by some people, I mean I said that once, so we know it must be true. You down? Tea-lightful.

Tea ya later.

Sorry, I'll stop with the tea puns...I went too far.

Love, Raven